


Quick Start Guide

Wireless 802.11b Serial Server
Model: ES1AWB

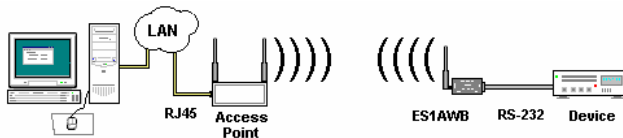

1 Configure Web Access

- Infrastructure Mode**
Configure your network using an access point with the SSID - *Connect* and all encryption disabled (such as WEP & WPA).
- Wireless Card Ad-Hoc Mode**
Configure the wireless card to operate in Ad-Hoc mode with the SSID - *Connect*.

2 Hardware Setup

- Connect your PC to the wireless network
- Connect the antenna to the ES1AWB
- Connect 5 VDC to the barrel jack of the ES1AWB
- Connect the ES1AWB serial port to the serial port of your serial device. (Use a null cable if the serial device is a DTE.)

3 Power Up

- Apply power to the ES1AWB
- The Link LED (yellow) will blink while looking for the wireless network. When a connection is established with the network the Link LED will illuminate steadily. The ES1AWB will connect to the SSID *Connect*. If it cannot find an SSID it will connect to the first unsecured network it finds.
- The ES1AWB will automatically try to obtain an IP address through DHCP, or generate one itself.

4 Get the IP Address

- Use the Discovery software on your CD (finder.exe) to get the IP address for your ES1AWB
- If necessary, change the IP address using the Discovery software.

5 Login

- In a web browser on your PC, type in the IP address and access the Web Configuration and Management Interface
- Login using the username 'root' and password 'dbps'

6 Configure the ES1AWB

- In the Configuration, Network page configure your Wireless LAN, Security and other settings to work on the type of wireless network you will be connecting to.
- In the Configuration, Serial Ports page select the Port Profile you require for use with your application (e.g. RealPort for virtual COM port, TCP Server, UDP server, Serial Bridge, etc.)
- Configure the serial port settings for the selected Port Profile (e.g. In TCP Sockets select client or server, TCP port numbers, etc.) Also configure baud rate, data bits, etc in Basic Serial Settings.
- Configure any required alarms and notification
- If RealPort profile was selected (virtual COM port) do the next step (Set up VCOM)

7 VCOM Setup

- For Win 2K/XP/Vista, start the RealPort software wizard (located on the included CD via setup.exe)
- Select your ES1AWB from the list
- Select an unused COM port number
- Follow the wizard to set up a virtual COM port
- For Win 98, ME, NT 4.0 follow the readme.txt included with each O/S (no setup.exe available)

8 Operation

- Configure and then start your application.

B&B electronics
MANUFACTURING COMPANY

International Headquarters: 707 Dayton Road PO Box 1040 Ottawa, IL 61350 USA
815-433-5100 Fax 433-5104 www.bb-elec.com orders@bb-elec.com support@bb-elec.com

European Headquarters: Westlink Commercial Park Oranmore Co. Galway Ireland

+353 91 792444 Fax +353 91 792445 www.bb-europe.com orders@bb-europe.com support@bb-europe.com