

MOXA EtherDevice™ Switch

EDS-518A Series Hardware Installation Guide

First Edition, March 2006



Moxa Networking Co., Ltd.

Tel: +886-2-2910-1230

Fax: +886-2-2910-1231

www.moxa.com

support@moxanet.com (Worldwide)

support@moxa.com (The Americas)

P/N: 1802005180000

Package Checklist


MOXA EtherDevice™ Switch is shipped with the following items. If any of these items are missing or damaged, please contact your customer service representative for assistance.

- 1 MOXA EtherDevice Switch EDS-518A
- Hardware Installation Guide
- CD-ROM with User's Manual and Windows Utility
- Moxa Product Warranty Booklet
- RJ45 to DB9 Console port cable
- Protective caps for unused ports
- Panel mounting kit (optional—must order separately)


Optional Accessories

- **DR-4524**—45W/2A DIN-Rail 24 VDC Power Supply with 85 to 264 VAC input
- **DR-75-24**—75W/3.2A DIN-Rail 24 VDC Power Supply with 85 to 264 VAC input
- **DR-120-24**—120W/5A DIN-Rail 24 VDC Power Supply with 88 to 132 VAC/176 to 264 VAC input by switch
- **EDS-SNMP OPC Server Pro**—CD with EDS-SNMP OPC Server Software and manual
- **WK-46**—Wall Mounting Kit


Panel Views of EDS-518A

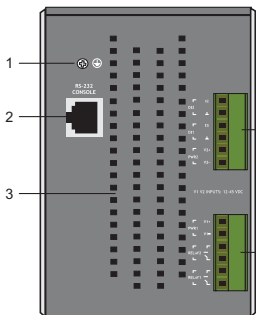

- 1. Grounding screw
- 2. Console port
- 3. Heat dissipation orifices
- 4. 6-pin terminal block for DI 1, DI 2, and PWR 2
- 5. 6-pin terminal block for PWR1, Relay 1, and Relay 2

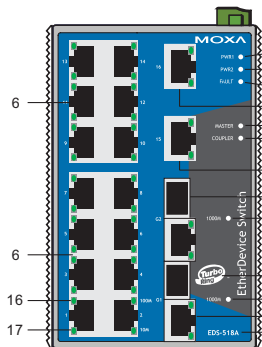


- 6. 10/100BaseT(X), ports 1 to 16
- 7. PWR 1: LED for power input 1
- 8. PWR 2: LED for power input 2
- 9. Fault LED
- 10. MASTER LED
- 11. COUPLER LED
- 12. 10/100/1000BaseT(X), port G2
- 13. 10/100/1000BaseT(X), port G1
- 14. Turbo Ring logo
- 15. 1000 Mbps LEDs
- 16. TP port's 100 Mbps LED
- 17. TP port's 10 Mbps LED

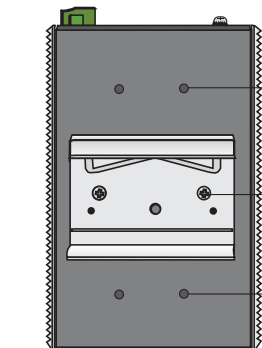

- 18. Model Name
- 19. Screw hole for Wall Mounting Kit
- 20. DIN-Rail Kit

Panel Views of EDS-518A (SC/ST Type)

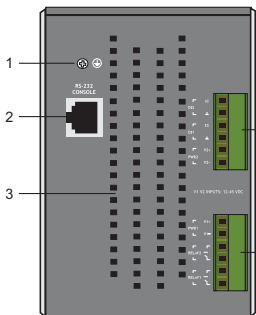


NOTE:

The appearance of EDS-518A-SS-SC is identical to EDS-518A-MM-SC.

The appearance of EDS-518A-MM-ST is identical to EDS-518A-MM-SC.


1. Grounding screw
2. Console port
3. Heat dissipation orifices
4. 6-pin terminal block for DI 1, DI 2, and PWR 2

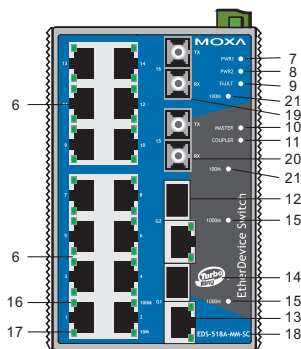


5. 6-pin terminal block for PWR1, Relay 1, and Relay 2
6. 10/100BaseT(X), ports 1 to 14
7. PWR 1: LED for power input 1
8. PWR 2: LED for power input 2
9. Fault LED
10. MASTER LED
11. COUPLER LED

12. 10/100/1000BaseT(X) Port G2
13. 10/100/1000BaseT(X) Port G1

14. Turbo Ring logo
15. 1000 Mbps LEDs
16. TP port's 100 Mbps LED
17. TP port's 10 Mbps LED
18. Model Name
19. 100BaseFX Port 16
20. 100BaseFX Port 15
21. 100BaseFX LEDs
22. Screw hole for Wall Mounting Kit
23. DIN-Rail Kit

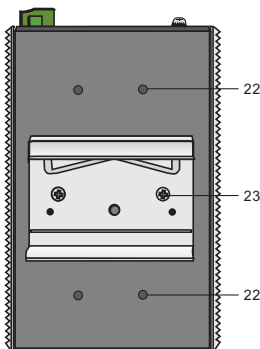

Mounting Dimensions (unit = mm)

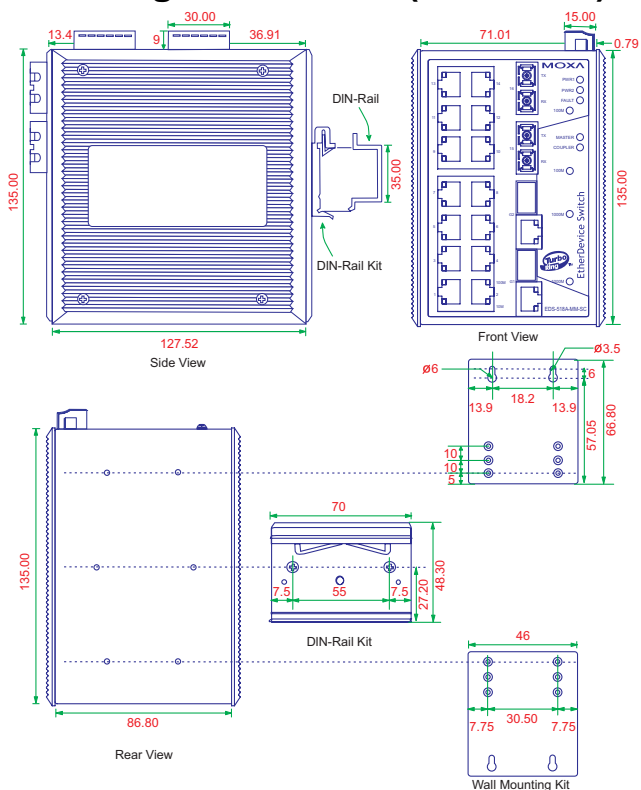


DIN-Rail Mounting

The aluminum DIN-Rail attachment plate should already be fixed to the back panel of EDS-518A when you take it out of the box. If you need to reattach the DIN-Rail attachment plate to EDS-518A, make sure the stiff metal spring is situated towards the top, as shown by the following figures.

STEP 1—Insert the top of the DIN-Rail into the slot just below the stiff metal spring.

STEP 2—The DIN-Rail attachment unit will snap into place as shown by the following illustration.

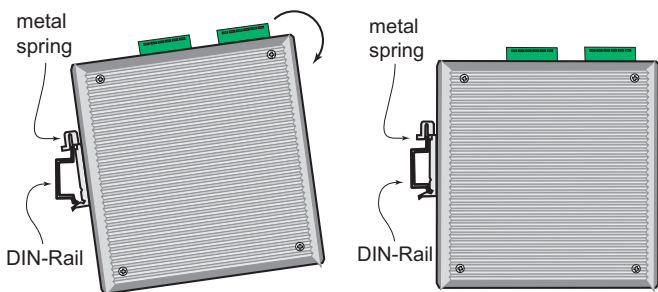


To remove EDS-518A from the DIN-Rail, simply reverse Steps 1 and 2 above.


Wall Mounting (Optional)

For some applications, you will find it convenient to mount MOXA EDS-518A on the wall, as shown by the following illustrations:

STEP 1—Remove the aluminum DIN-Rail attachment plate from the MOXA EDS-518A rear panel, and then attach the wall mount plates, as shown by the figure on the right.

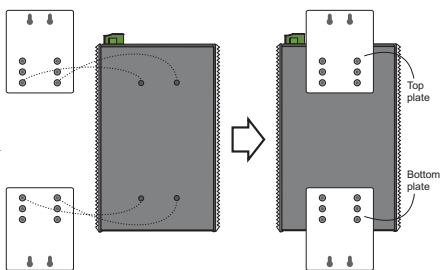


STEP 2—Mounting MOXA EDS-518A on the wall requires 4 screws. Use the EDS-518A, with wall mount plates attached, as a guide to mark the correct locations of the 4 screws. The heads of the screws should be less than 6.0 mm in diameter, and the shafts should be less than 3.5 mm in diameter, as shown by the figure on the right.

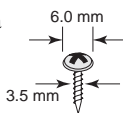

NOTE Before tightening the screws into the wall, make sure the screw head and shank size are suitable by inserting the screw through one of the keyhole-shaped apertures of the Wall Mounting Plates.

Do not screw the screws in all the way—leave about 2 mm to allow room for sliding the wall mount panel between the wall and the screws.

STEP 3—Once the screws are fixed on the wall, insert the four screw heads through the wide parts of the keyhole-shaped apertures, and then slide EDS-518A downwards, as indicated by the figure on the right. Tighten the four screws for more stability.

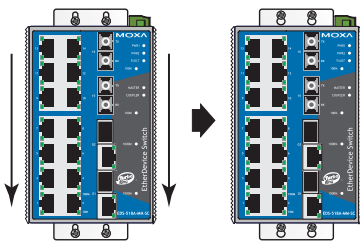

Wiring Requirements



WARNING

Do not disconnect modules or wires unless power has been switched off or the area is known to be non-hazardous. The devices may only be connected to the supply voltage shown on the type plate. The devices are designed for operation with a Safety Extra-Low Voltage. Thus, they may only be connected to the supply voltage connections and to the signal contact with the Safety Extra-Low Voltages (SELV) in compliance with IEC950/EN60950/ VDE0805.



ATTENTION

This unit is a built-in type. When the unit is installed in another piece of equipment, the equipment enclosing the unit must comply with fire enclosure regulation IEC 60950/EN60950 (or similar regulation).



ATTENTION

Safety First!

Be sure to disconnect the power cord before installing and/or wiring your MOXA EtherDevice Switch.

Calculate the maximum possible current in each power wire and common wire. Observe all electrical codes dictating the maximum current allowable for each wire size.

If the current goes above the maximum ratings, the wiring could overheat, causing serious damage to your equipment.

You should also pay attention to the following points:

- Use separate paths to route wiring for power and devices. If power wiring and device wiring paths must cross, make sure the wires are perpendicular at the intersection point
- NOTE: Do not run signal or communications wiring and power wiring through the same wire conduit. To avoid interference, wires with different signal characteristics should be routed separately
- You can use the type of signal transmitted through a wire to determine which wires should be kept separate. The rule of thumb is that wiring that shares similar electrical characteristics can be bundled together
- Separate input wiring and output wiring
- We advise that you label wiring to all devices in the system when necessary.

Grounding MOXA EDS-518A

Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the ground screw to the grounding surface prior to connecting devices.





ATTENTION

This product is intended to be mounted to a well-grounded mounting surface such as a metal panel.

Wiring the Relay Contact

EDS-518A has two sets of relay outputs—relay 1 and relay 2. Each Relay Contact consists of the two contacts of the terminal block on EDS-518A's top panel. You can refer to the next section for detailed instructions on how to connect the wires to the terminal block connector, and how to attach the terminal block connector to the terminal block receptor.

In this section, we will explain the meaning of the two contacts used to connect the Relay Contact.

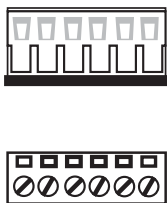
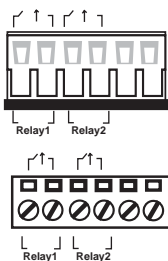


FAULT:

The two sets of relay contacts of the 6-pin terminal block connector are used to detect user-configured events. The two wires attached to the Fault contacts form an open circuit when a user-configured event is triggered. If a user-configured event does not occur, the Fault circuit remains closed.

Wiring the Redundant Power Inputs

EDS-518A has two sets of power inputs—power input 1 and power input 2. The top two contacts and the bottom two contacts of the 6-pin terminal block connector on EDS’ top panel are used for EDS’ two digital inputs. The top and front views of one of the terminal block connectors are shown here.

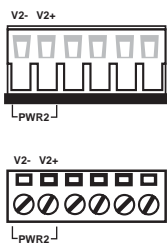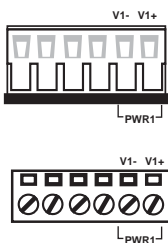



STEP 1: Insert the negative/positive DC wires into the V-/V+ terminals, respectively.

STEP 2: To keep the DC wires from pulling loose, use a small flat-blade screwdriver to tighten the wire-clamp screws on the front of the terminal block connector.

STEP 3: Insert the plastic terminal block connector prongs into the terminal block receptor, which is located on EDS-518A’s top panel.

Wiring the Digital Inputs

EDS-518A has two sets of digital inputs, DI 1 and DI 2. Each DI consists of two contacts of the 6-pin terminal block connector on EDS’s top panel, which are used for EDS’s two DC inputs. The top and front views of one of the terminal block connectors are shown here.

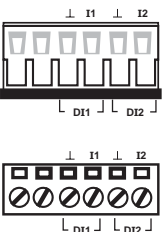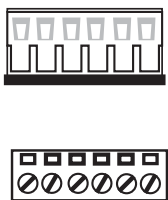

STEP 1: Insert the negative (ground)/positive DI wires into the \perp /I1 terminals, respectively.

STEP 2: To keep the DI wires from pulling loose, use a small flat-blade screwdriver to tighten the wire-clamp screws on the front of the terminal block connector.

STEP 3: Insert the plastic terminal block connector prongs into the terminal block receptor, which is located on EDS-518A’s top panel.

Communication Connections

All models of EDS-518A have one RJ45 console port (RS-232 interface), between 14 and 16 10/100BaseTX Ethernet ports, and 2 10/100/1000BaseTX gigabit Ethernet ports. Some models also have 2 100BaseFX (SC/ST-type connector) fiber ports.

In this section, we present two types of diagrams—Pinout Diagrams and Cable Wiring Diagrams—to convey information about the ports and the cables used to connect MOXA EDS-518A to other devices:

Pinouts—The meaning of the “Pinouts” diagrams is straightforward. The diagrams simply display the type of signal passing through each of the port’s pins.

Cable Wiring—Diagrams labeled “Cable Wiring” present standard cable wiring schemes for cables used to connect MOXA EtherDevice Switch’s ports to other devices. These diagrams display three pieces of information:

1. When building your own cable, refer to the “pin-to-pin” Cable Wiring information displayed between the two vertical dashed lines to see which pin of the connector on the left should be connected to which pin of the connector on the right.
2. The information to the left of the left vertical dashed lines gives the pinouts of the relevant MOXA EtherDevice Switch port.
3. The information to the right of the right vertical dashed line gives the pinouts of the opposing device’s port.


- | |
|--|
| <p>NOTE</p> <ol style="list-style-type: none">1. The pin numbers for male DB9 and DB25 connectors, and hole numbers for female DB9 and DB25 connectors are labeled on the connector. However, the numbers are typically quite small, so you may need to use a magnifying glass to see the numbers clearly.2. The pin numbers for both 8-pin and 10-pin RJ45 connectors (and ports) are typically not labeled on the connector (or port). Refer to the following Pinout and Cable Wiring diagrams to see how RJ45 pins are numbered |
|--|

RS-232 Connection


MOXA EDS-518A has one RS-232 (10-pin RJ45) console port, located on the top panel. Use either an RJ45-to-DB9 or RJ45-to-DB25 cable (see the cable following wiring diagrams) to connect MOXA EDS-518A's console port to your PC's COM port. You may then use a console terminal program, such as MOXA PComm Terminal Emulator, to access MOXA EDS-518A's console configuration utility.

RJ45 (10-pin) Console Port Pinouts


Pin	Description
1	-----
2	DSR
3	-----
4	GND
5	TxD
6	RxD
7	GND
8	-----
9	DTR
10	-----

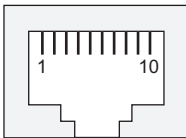

RJ45 (10-pin) to DB9 (F) Cable Wiring

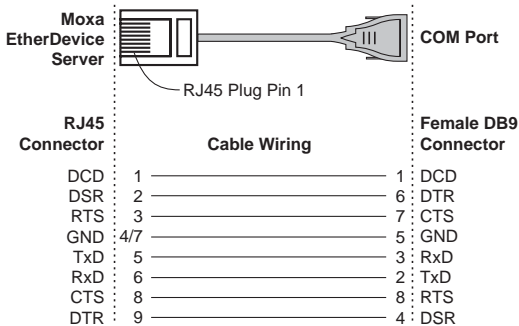

RJ45 (10-pin) to DB25 (F) Cable Wiring

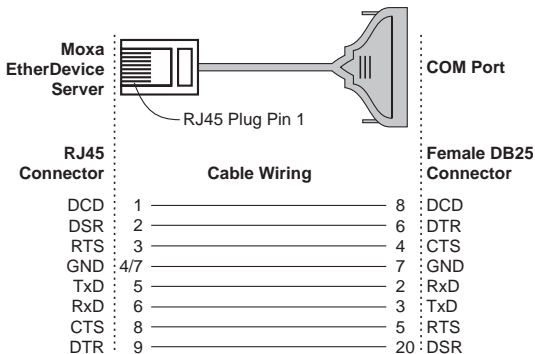


10/100BaseT(X) Ethernet Port Connection

The 10/100BaseT(X) ports located on MOXA EtherDevice Switch's front panel are used to connect to Ethernet-enabled devices. Most users will choose to configure these ports for Auto MDI/MDI-X mode, in which case the port's pinouts are adjusted automatically depending on the type of Ethernet cable used (straight-through or cross-over), and the type of device (NIC-type or HUB/Switch-type) connected to the port.

In what follows, we give pinouts for both MDI (NIC-type) ports and MDI-X (HUB/Switch-type) ports. We also give cable wiring diagrams for straight-through and cross-over Ethernet cables.


RJ45 (8-pin, MDI) Port Pinouts

Pin	Signal
1	Tx+
2	Tx-
3	Rx+
6	Rx-

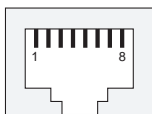


RJ45 (8-pin, MDI-X) Port Pinouts


Pin	Signal
1	Rx+
2	Rx-
3	Tx+
6	Tx-

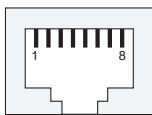

RJ45 (8-pin) to RJ45 (8-pin) Straight-Through Cable Wiring

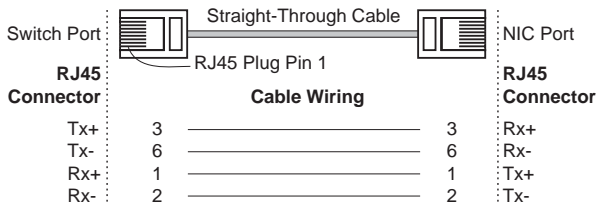

RJ45 (8-pin) to RJ45 (8-pin) Cross-Over Cable Wiring

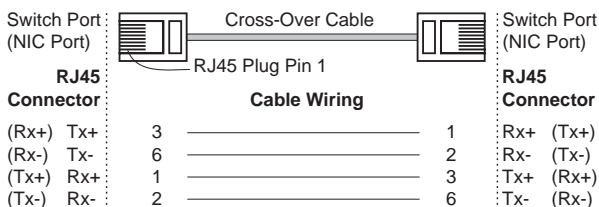


1000BaseT Ethernet Port Connection

1000BaseT data is transmitted on differential TRD+/- signal pairs over copper wires.

MDI/MDI-X Port Pinouts

Pin	Signal
1	TRD(0)+
2	TRD(0)-
3	TRD(1)+
4	TRD(2)+
5	TRD(2)-
6	TRD(1)-
7	TRD(3)+
8	TRD(3)-

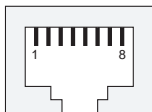


100BaseFx Ethernet Port Connection

The concept behind the SC/ST port and cable is quite straightforward. Suppose you are connecting devices I and II. As opposed to electrical signals, optical signals do not require a circuit in order to transmit data. Consequently, one of the optical lines is used to transmit data from device I to device II, and the other optical line is used to transmit data from device II to device I, for full-duplex transmission.

All you need to remember is to connect the Tx (transmit) port of device I to the Rx (receive) port of device II, and the Rx (receive) port of device I to the Tx (transmit) port of device II. If you are making your own cable, we suggest labeling the two sides of the same line with the same letter (A-to-A and B-to-B, as shown by the following illustration, or A1-to-A2 and B1-to-B2).


SC Port Pinouts

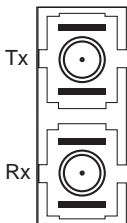


SC-Port to SC-Port Cable Wiring



Cable Wiring

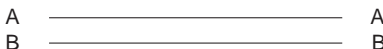


ST Port Pinouts

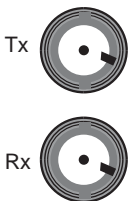

ST-Port to ST-Port Cable Wiring



Cable Wiring

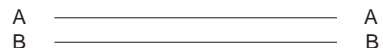

ATTENTION

This is a Class 1 Laser/LED product. To prevent damage to your eyes, do not stare directly into the laser beam.

LED Indicators

The front panel of MOXA EDS-518A contains several LED indicators. The function of each LED is described in the **following table**:

LED	Color	State	Description
PWR1	AMBER	On	Power is being supplied to power input P1.
		Off	Power is not being supplied to power input P1.
PWR2	AMBER	On	Power is being supplied to power input P2.
		Off	Power is not being supplied to power input P2.
FAULT	RED	On	When the corresponding PORT alarm is enabled, and a user-configured event is triggered.
		Off	When the corresponding PORT alarm is enabled and a user-configured event is not triggered, or when the corresponding PORT alarm is disabled.
MASTER	GREEN	On	When the EDS-518A is the Master of this Turbo Ring
		Blinking	When the EDS-518A is Ring Master of this Turbo Ring and the Turbo Ring is broken.
COUPLER	GREEN	On	When the EDS-518A enables the coupling function to form a back-up path.
		Off	When the EDS-518A disables the coupling function.
10M (TP)	GREEN	On	TP port's 10 Mbps link is active.
		Blinking	Data is being transmitted at 10 Mbps.
		Off	TP port's 10 Mbps link is inactive.
100M (TP)	GREEN	On	TP port's 100 Mbps link is active.
		Blinking	Data is being transmitted at 100 Mbps.
		Off	TP port's 100 Mbps link is inactive.
100M (FX)	GREEN	On	FX port's 100 Mbps link is active.
		Blinking	Data is being transmitted at 100 Mbps.
		Off	FX port's 100 Mbps link is inactive.
1000M (TP/SFP)	GREEN	On	TP/SFP port's 1000 Mbps link is active.
		Blinking	Data is being transmitted at 1000 Mbps.
		Off	TP/SFP port's 1000 Mbps link is inactive.

Specifications

Technology

Standards	IEEE802.3, 802.3u, 802.3x, 802.1D, 802.1w, 802.1Q, 802.1p, 802.1X, 802.3ad, 802.3z
Protocols	IGMP V1/ V2/ V3 device, GMRP, GVRP, SNMP V1/V2c/V3, DHCP Server/Client, BootP, TFTP, SNTP, SMTP, RARP, RMON and EDS-SNMP OPC Server Pro (Optional)
MIB	MIB-II, Ethernet-Like MIB, P-BRIDGE MIB, Q-BRIDGE MIB, Bridge MIB, RSTP MIB, RMON MIB Group 1,2,3,9

Interface

RJ45 Ports	10/100/1000BaseT(X) auto negotiation speed, F/H duplex mode, and auto MDI/MDI-X connection
Fiber Ports	100BaseFX (SC/ST connector) and optional 1000BaseSX/LX/LHX/ZX (LC connector)
Console	RS-232 (RJ45)
LED Indicators	PWR1, PWR2, FAULT, 10/100M (TP port), 100M (Fiber port), 1000M, Ring Master and Ring Coupler
Alarm Contact	Two relay outputs with current carrying capacity of 1A @ 24 VDC
Digital Input	Two inputs with the same ground, but electrically isolated from the electronics <ul style="list-style-type: none">• For state “1”: +13 to +30V• For state “0”: -30 to +3V• Max. input current: 8 mA

Optical Fiber—100BaseFX

Distance:

Multi mode:	0 to 5 km, 1300 nm (50/125 μ m, 800 MHz*km) 0 to 4 km, 1300 nm (62.5/125 μ m, 500 MHz*km)
Single mode:	0 to 40 km, 1310 nm (9/125 μ m, 3.5 PS/(nm*km)) 0 to 80 km, 1550 nm (9/125 μ m, 19 PS/(nm*km))

Min. TX Output:

Multi mode :	-20 dBm
Single mode:	0 to 40 km, -5 dBm 0 to 80 km, -5 dBm

Max. TX Output:

Multi mode :	-14 dBm
Single mode:	0 to 40 km, 0 dBm 0 to 80 km, 0 dBm

Sensitivity:

Multi mode :	-34 to -30 dBm
Single mode:	-36 to -32 dBm

Optical Fiber—1000BaseSX/LX/LHX/ZX

Distance:

Multi mode:

- 1000BaseSX
0 to 500 m, 850 nm (50/125 μm , 400 MHz*km)
0 to 275 m, 850 nm (62.5/125 μm , 200 MHz*km)
- 1000BaseLX
0 to 1100 m, 1310 nm (50/125 μm , 800 MHz*km)
0 to 550 m, 1310 nm (62.5.125 μm , 500 MHz*km)

Single mode:

- 1000BaseLX
0 to 10 km, 1310 nm (9/125 μm , 3.5 PS/(nm*km))
- 1000BaseLHX
0 to 40 km, 1310 nm ((9/125 μm , 3.5 PS/(nm*km)))
- 1000BaseZX
0 to 80 km, 1550 nm ((9/125 μm , 19 PS/(nm*km))

Power

Input Voltage	24 VDC(12 to 45 VDC), redundant inputs
Input Current (@24V)	0.67A: (EDS-518A) 0.78A: (EDS-518AMM-SC/ST, EDS-518A-SS-SC)
Connection	Two removable 6-pin terminal blocks
Overload Current Protection	Present
Reverse Polarity Protection	Present

Mechanical

Casing	IP30 protection, metal case
Dimensions	95 x 135 x 140 mm (W x H x D)
Weight	1.63 kg
Installation	DIN-Rail, Wall Mounting (optional kit)

Environmental

Operating Temperature	0 to 60°C (32 to 140°F)
Storage Temperature	-40 to 85°C (-40 to 185°F)
Ambient Relative Humidity	5% to 95% (non-condensing)

Regulatory Approvals

Safety	UL60950, UL 508 (Pending), CSA C22.2 No. 60950, EN60950
Hazardous Location	UL/cUL Class I, Division 2, Groups A, B, C, and D, ATEX Class I, Zone 2, EEx nC IIC (Pending)
EMI	FCC Part 15, CISPR (EN55022) class A
EMS	EN61000-4-2 (ESD), Level 3 EN61000-4-3 (RS), Level 3 EN61000-4-4 (EFT), Level 3 EN61000-4-5 (Surge), Level 3 EN61000-4-6 (CS), Level 3 EN61000-4-8 EN61000-4-11 EN61000-4-12
Shock	IEC60068-2-27
Freefall	IEC60068-2-32
Vibration	IEC60068-2-6
WARRANTY	5 years

MOXA Internet Services

Customer satisfaction is our number one concern. To ensure that customers receive the full benefit of our products, Moxa has set up on-line support services to provide technical support, driver updates, product information, and user's manual updates.

E-mail for technical support:

support@moxanet.com

(Worldwide)

support@moxa.com

(The Americas)

Website for up to date product information:

www.moxa.com