

FREQUENCY TRANSMITTER

(field- and PC-configurable)

MODEL **M3LPA**

BEFORE USE

Thank you for choosing M-System. Before use, check the package you received as below.

If you have any problems or questions with the product, please contact M-System's Sales Office or representatives.

■ PACKAGE INCLUDES:

- Signal conditioner (1)
- I/O range and tag name label sheet (1)

■ MODEL NO.

Check that the model No. described on the specification label is exactly what you ordered.

■ INSTRUCTION MANUAL

This manual describes the necessary points of caution when you use this product, including installation, connection and basic maintenance procedures.

The M3LPA with Option /A is programmable using the PC configurator software. For detailed information on the PC configuration, refer to the M3CON instruction manual. The M3CON PC Configurator Software is downloadable at M-System's web site: <http://www.m-system.co.jp>.

POINTS OF CAUTION

■ CONFORMITY WITH UL

(UL is unavailable for certain model suffix options.)

- This equipment is suitable for use in a Pollution Degree 2 environment.
- This equipment is to be used with the maximum operating voltage 30Vrms and 42.4Vpeak or 60V DC.
- The equipment must be mounted inside a suitable fire enclosure.
- Operating temperature: -25 to +55°C (-13 to +131°F)

■ CONFORMITY WITH EC DIRECTIVES

- Operational insulation is maintained between the signal input and output. The input voltage must not exceed 70V to maintain the CE conformity.
- Altitude up to 2000 meters
- The equipment must be mounted inside a panel.
- Insert a noise filter for the power source connected to the unit. Densei-Lambda Noise Filter Model MZS-1220-22 or equivalent is recommended.
- The actual installation environments such as panel configurations, connected devices, connected wires, may affect the protection level of this unit when it is integrated in a panel system. The user may have to review the CE requirements in regard to the whole system and employ additional protective measures to ensure the CE conformity.

■ POWER INPUT

- Check the power rating for the unit on the specification label.
 - Rating 100 – 240V AC: 85 – 264V, 47 – 66 Hz, approx. 5 – 8VA
 - Rating 10 – 32V DC: 9 – 36V, approx. 3W
- Power fuse: A power fuse of the rating as shown below is incorporated for safety. However, DO NOT replace it by the user.
 - AC Rating: T 1A 250V
 - DC Rating: T 0.5A 250V

■ SAFETY PRECAUTION

- Before you remove the unit or mount it, turn off the power supply and input signal for safety.

■ ENVIRONMENT

- Indoor use
- When heavy dust or metal particles are present in the air, install the unit inside proper housing with sufficient ventilation.
- Do not install the unit where it is subjected to continuous vibration. Do not subject the unit to physical impact.
- Environmental temperature must be within -25 to +65°C (-13 to +149°F) with relative humidity within 0 to 95% RH in order to ensure adequate life span and operation.


■ WIRING

- Do not install cables (power supply, input and output) close to noise sources (relay drive cable, high frequency line, etc.).
- Do not bind the unit's cables together with cables where high noise levels are present. Do not install them in the same duct.

■ AND


- The unit is designed to function as soon as power is supplied, however, a warm up for 10 minutes is required for satisfying complete performance described in the data sheet.

COMPONENT IDENTIFICATION

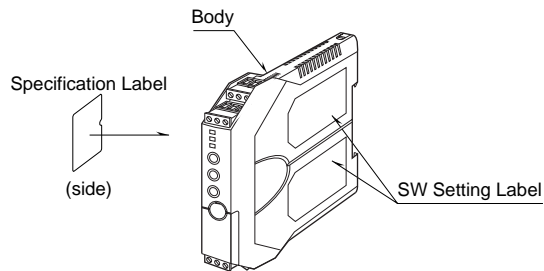


■ HOW TO OPEN THE COVER WHEN SETTING DIP SW

Hold at the top and bottom of the unit as shown below and slide the housing cover gently to open until it hits the latching inside the unit.

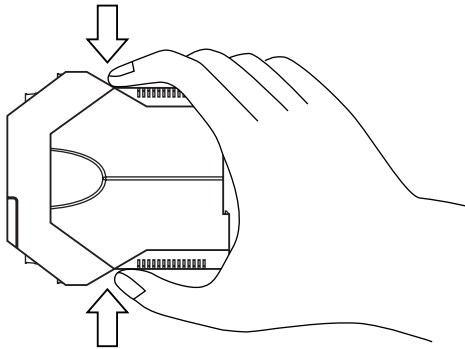


• Housing Cover Fully Opened

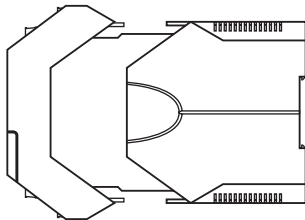

Caution: DO NOT PULL beyond where the housing cover is latched. The plastic housing may be damaged.

■ HOW TO SEPARATE THE TERMINAL BLOCKS


When you need to separate the terminal blocks from the transmitter body for wiring, insert a minus driver between the terminal block and the housing body, pull up the driver and pull out the terminal block.

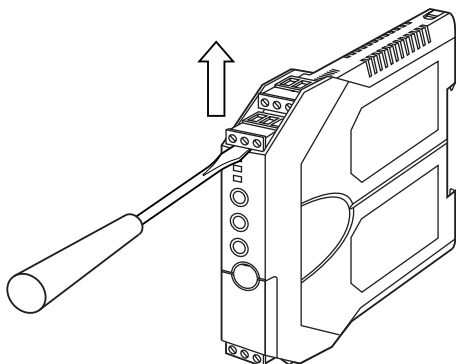

INSTALLATION

■ DIN RAIL MOUNTING


Set the unit so that its DIN rail adaptor is at the bottom. Position the upper hook at the rear side of the unit on the DIN rail and push in the lower. When removing the unit, push down the DIN rail adaptor utilizing a minus screwdriver and pull.

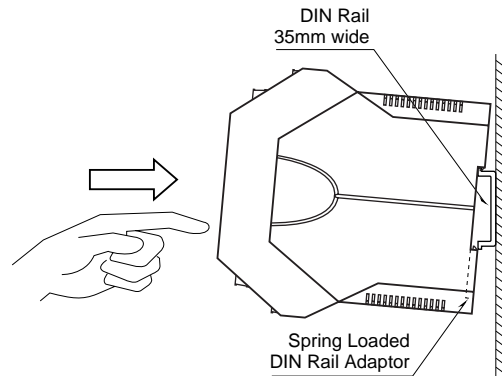


TERMINAL CONNECTIONS

Connect the unit by referring to the diagram below.

DC POWERED TYPE

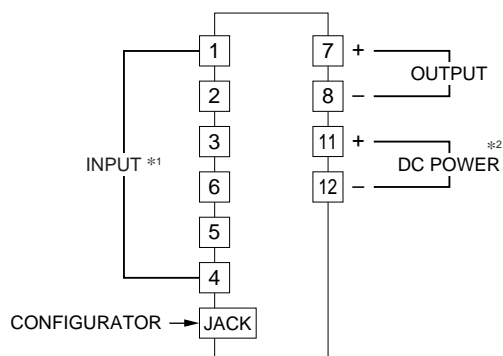


AC POWERED TYPE

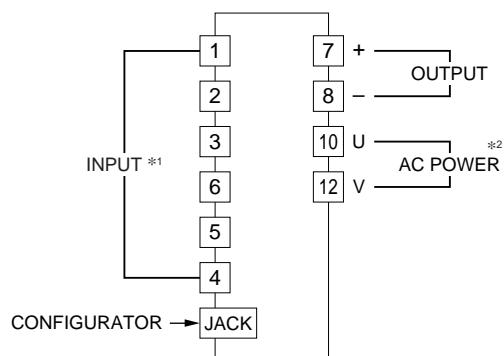


*2. Be aware that the AC power and DC power connect to different terminals.

*1. Input Connection Examples

Open Collector

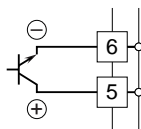


Voltage Pulse

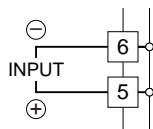


Two-wire Current Pulse


Built-in Excitation

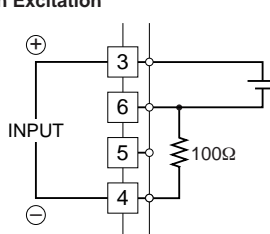


Excitation Supply

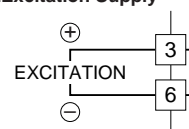


Mechanical Contact

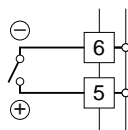

RS-422 Line Driver Pulse

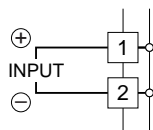


External DC Supply

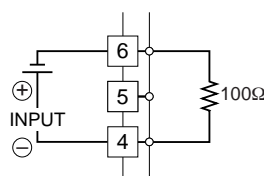


EXTERNAL & INTERNAL VIEWS

FRONT VIEW

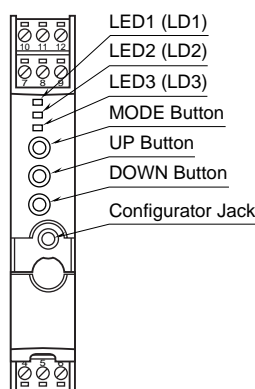

SIDE VIEW

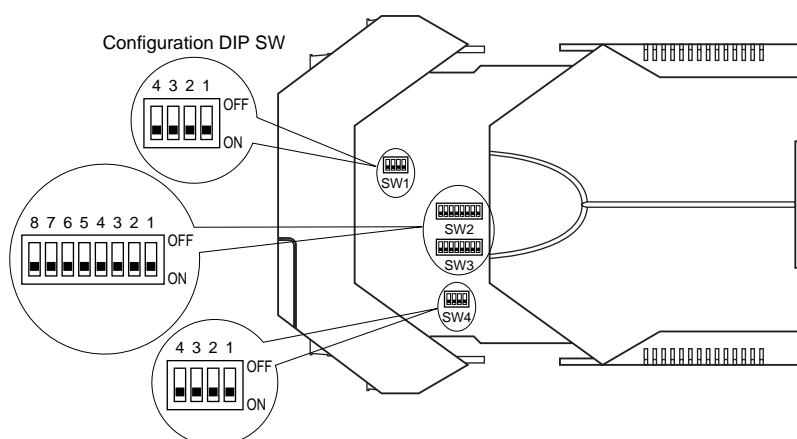

CONFIGURATION MODE & DIP SW SETTINGS

When you program the transmitter module, two configuration modes are available: Field Configuration using DIP SW / control buttons, and PC Software. (Option B type is for the field configuration only.)

The internal DIP switches are used to configure excitation and output type. Once the module is configured, precise input and output ranges are set up with the front control buttons using a simulator connected to the input terminals and a multimeter connected to the output terminals as a reference.

The calibrated input and output ranges are stored in the internal memory. The module reads the DIP-switch-calibrated configuration only once after the power supply is turned on. Set the switches with the power supply removed.

DIP SW CONFIGURATION MODE

Turn the SW3-8 OFF to enable the DIP SW (Field Configuration) mode as shown in Table 1.

See Table 2 through 9 to configure the input type, frequency range and other features and Table 10 for the output.

PC CONFIGURATION MODE

Turn the SW3-8 ON to enable the PC Configuration mode as shown in Table 1. All programmable features can be set up on a PC regardless of other DIP SW setting except for the following: the output type must be selected with the DIP SW1-1 through SW1-4 (See Table 11), and the pulse sensing type and noise filter must be selected with the DIP SW4-1 through SW4-3 (See Tables 8 and 9).

For detailed information on the PC configuration, refer to the M3CON instruction manual.

CONFIGURATION MODE (SW3)

Table 1

MODE	SW3-8	
DIP SW	OFF	Configuration mode can be confirmed with the front LED.
PC	ON	

INPUT TYPE (SW2)

Table 2

INPUT	SW2-2	SW2-1
Open Collector		
Mechanical Contact	OFF	OFF
Voltage Pulse	ON	OFF
Two-wire Current Pulse	OFF	ON
RS-422 Line Driver Pulse	ON	ON

FREQUENCY RANGE (SW2)

Table 3

FREQUENCY	SW2-5	SW2-4	SW2-3
0 – 10 Hz	ON	OFF	OFF
0 – 100 Hz	OFF	ON	OFF
0 – 1k Hz	ON	ON	OFF
0 – 10 kHz	OFF	OFF	ON
0 – 100 kHz	ON	OFF	ON

PULSE AMPLITUDE (SW2)

Table 4

AMPLITUDE	MAXIMUM VOLTAGE	SW2-8	SW2-7	SW2-6
50 – 100V p-p	100V*1	OFF	OFF	OFF
25 – 50V p-p	50V	ON	OFF	OFF
10 – 25V p-p	25V	OFF	ON	OFF
5 – 10V p-p	10V	ON	ON	OFF
1 – 5V p-p	5V	OFF	OFF	ON
0.5 – 1V p-p	1V	ON	OFF	ON
0.1 – 0.5V p-p	0.5V *2	OFF	ON	ON

*1. Max. 30V rms, 42.4V peak or 60V DC for UL approval.

*2. Max. input frequency limited to 50 kHz.

■CUTOUT (SW3) Table 5

CUTOUT	SW3-7
With (0.1% fixed)	ON
Without	OFF

■POLARITY (SW3) Table 6

POLARITY	SW3-6
Bipolar	OFF
Unipolar	ON

■EXCITATION SUPPLY (SW3) Table 7

EXCITATION	SW3-5	SW3-4
4V	ON	OFF
8V	OFF	ON
12V	ON	ON

■PULSE SENSING (SW4) *3 Table 8

SENSING	SW4-3
Capacitor Coupled	OFF
DC Coupled	ON

■NOISE FILTER (SW4) *3 Table 9

FILTER	SW4-2	SW4-1
Large	ON	OFF
Small	OFF	ON
Without	OFF	OFF

■OUTPUT TYPE (SW3 & 1) Table 10

OUTPUT	SW3-3	SW3-2	SW3-1	SW1-4	SW1-3	SW1-2	SW1-1
0 – 20mA	OFF	ON	ON	OFF	ON	OFF	OFF
-2.5 – +2.5V	ON	OFF	OFF	ON	OFF	OFF	ON
-10 – +10V	OFF	OFF	OFF	ON	OFF	ON	OFF

■OUTPUT TYPE / PC CONFIG (SW1) *3 Table 11

OUTPUT	SW1-4	SW1-3	SW1-2	SW1-1
0 – 20mA	OFF	ON	OFF	OFF
-2.5 – +2.5V	ON	OFF	OFF	ON
-10 – +10V	ON	OFF	ON	OFF

*3. DIP SW setting is required for PC configuration type.

CHECKING

- 1) Terminal wiring: Check that all cables are correctly connected according to the connection diagram.
- 2) DIP SW setting: Check that the switches are set to appropriate positions.
- 3) Power input voltage: Check voltage across the terminal 10 – 12 (AC) or 11 – 12 (DC) with a multimeter.
- 4) Input: Check that the input signal is within 0 – 100% of full-scale.
- 5) Output: Check that the load resistance meets the described specifications.


I/O RANGING & FINE ADJUSTMENTS

After the DIP SW setting is complete, set up the precise input and output range using the front control buttons.

The front LEDs' colors and flashing patterns help you to easily identify the transmitter's status and confirm the setup actions in each step of Calibration Modes. Please read the following explanations referring to "Calibration Flow Chart" in Page 5.

■ PREPARATION (e.g. M3LPA-R4/A, DC powered type)

- 1) Mount the DIP-SW-configured M3LPA on to a DIN rail.
- 2) Connect the M3LPA to a simulator and a multimeter and to a power source as shown below.
- 3) Turn the power supply on and wait for 10 minutes.

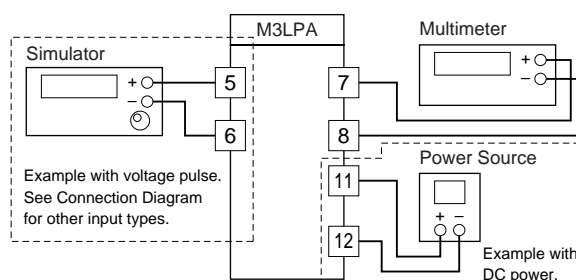


■ INPUT & OUTPUT RANGING

[Example] Setting input to 10 – 80 Hz (DIP SW range 0 – 100 Hz), output to 1 – 5V DC (DIP SW range $\pm 10V$).

- 1) Run Mode: Confirm that the LD1 green light is blinking.
- 2) Threshold Calibration Mode: Mode: Press MODE button for longer than 5 seconds until the LD1 red light is ON.
- 3) Threshold Setting: Apply the full-scale input level (e.g. 100 Hz) from the simulator and push UP or DOWN buttons until the output meter shows the full-scale output level (e.g. +10V).
- 4) Input Calibration Mode: Push MODE button and confirm that the LD1 red light is ON and the LD2 red light is blinking.
- 5) 0% Input Ranging: Apply the desired minimum input level (e.g. 10 Hz) from the simulator and push DOWN button until the LD1 flashes for approx. 5 sec. and then turns OFF. When you release the button, the LD1 is returned to ON.
The flashing LD1 means that the value is stored in the memory. If LED's flashing frequency does not change, the entered level may be inappropriate: too small a span, or out of usable range (same for all steps).
For setting 0% input to 0 Hz, apply certain frequency below 1 Hz.
- 6) 100% Input Ranging: Apply the desired maximum input level (e.g. 80 Hz) from the simulator and push UP button until the LD1 flashes for approx. 5 sec. and then turns OFF. When you release the button, the LD1 is returned to ON.
- 7) Output Configuration Mode: Push MODE button and confirm that the LD1 red light is ON and the LD3 red light instead of LD2 is blinking.
- 8) 0% Output Ranging: Increase or decrease the simulated input until the meter shows the desired minimum output level (e.g. 1V). Push DOWN button until the LD1 flashes for approx. 5 sec. and then turns OFF. When you release the button, the LD1 is returned to ON.

- 9) 100% Output Ranging: Increase or decrease the simulated input until the meter shows the desired maximum output level (e.g. 5V). Push UP button until the LD1 flashes for approx. 5 sec. and then turns OFF. When you release the button, the LD1 is returned to ON. When you release the button, the LD1 is returned to ON.
- 10) Run Mode: Programming complete, push MODE button and confirm that only the LD1 green light is blinking.

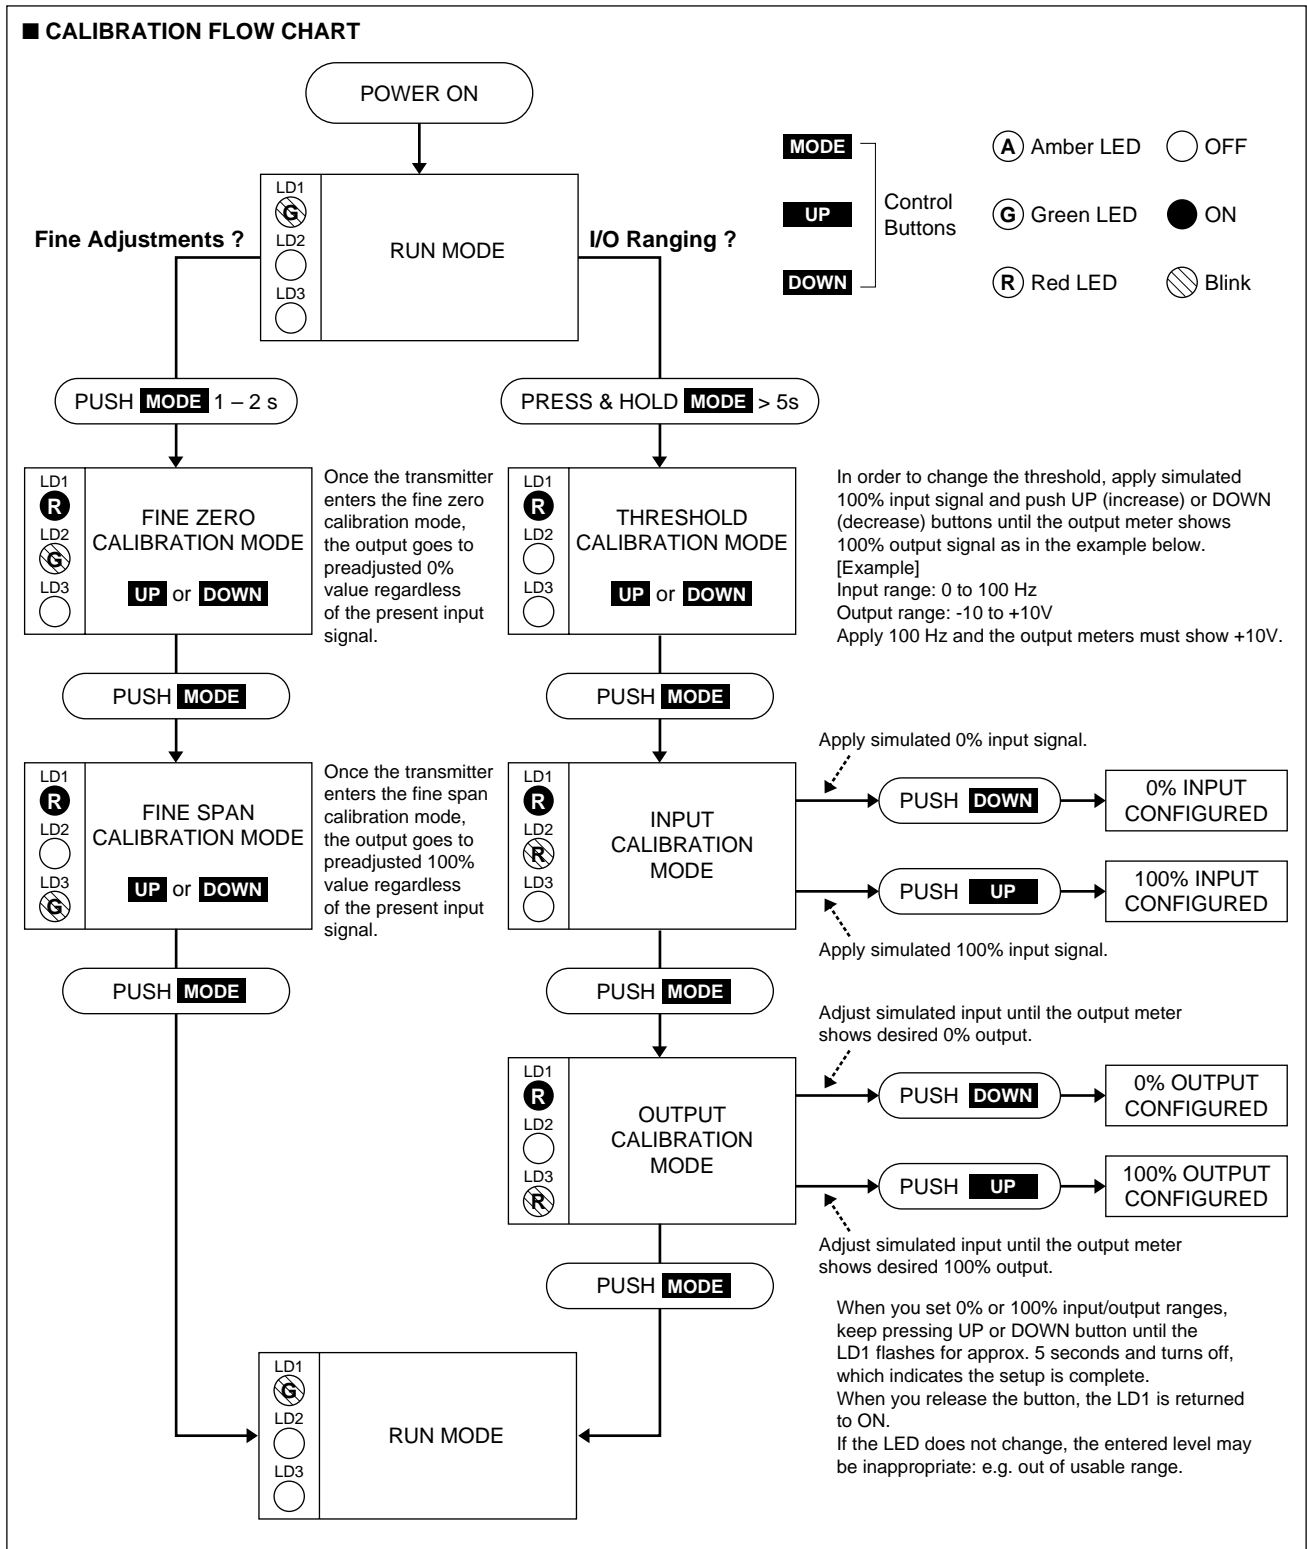

■ INPUT TYPE & RANGE

Table 12

INPUT TYPE	MINIMUM AMPLITUDE	MAXIMUM RANGE *4	MAXIMUM AMPLITUDE
Open Collector	4V	0 – 100 kHz	12V
Mechanical Contact	4V	0 – 5 Hz	12V
Voltage Pulse	0.1V	0 – 100 kHz	100V
Two-wire Current Pulse	4mA	0 – 100 kHz	20mA
RS-422 Line Driver Pulse	—	0 – 100 kHz	—

*4. Minimum span: 10% of the maximum frequency range selected in Table 3. (Max./Min. pulse width: 10 sec. / 10 μ sec.)
Time constant is set to 50 msec. with the 'large' noise filter setting and to 10 msec. with the 'small' noise filter setting (Table 9).

■ OUTPUT TYPE & RANGE

Table 13

OUTPUT TYPE	MINIMUM SPAN	MAXIMUM RANGE	CONFORMANCE RANGE
DC Current	1mA	0 to 20mA	0 to 24mA
DC Voltage, Narrow Spans	250mV	-2.5 to +2.5V	-3 to +3V
DC Voltage, Wide Spans	1V	-10 to +10V	-11.5 to +11.5V

■ ZERO & SPAN ADJUSTMENTS

After the transmitter is installed and operational, fine zero and span tuning can be performed as explained below. Both zero and span are adjustable within $\pm 15\%$.

- 1) Run Mode: Confirm that the LD1 green light is blinking.
- 2) Fine Zero Calibration Mode: Press MODE button for 1 or 2 seconds until the LD1 red light is ON and the LD2 green light is blinking.
- 3) Use UP (increase) and DOWN (decrease) buttons to adjust the output to 0%.
- 4) Fine Span Calibration Mode: Push MODE button and confirm that the LD1 red light is ON and the LD3 green light instead of LD2 is blinking.
- 5) Use UP (increase) and DOWN (decrease) buttons to adjust the output to 100%.
- 6) Run Mode: Push MODE button and confirm that only the LD1 green light is blinking.


Note 1: Calibration steps can be skipped when not needed by repeating pushing MODE buttons.

Note 2: There is no limitation of entering values for multiple times within one step of Calibration Mode. Signal level is stored each time the respective UP or DOWN button is pressed. However, for the input ranging, end always with 100% (UP).

Note 3: Once the transmitter enters the fine zero or span calibration mode, the output goes to preadjusted 0% or 100% value respectively regardless of the present input signal.

■ I/O RANGE LABEL

Blank I/O range labels are included in the product package. Write in the configured ranges and put the label on the side above the specification label as shown below.

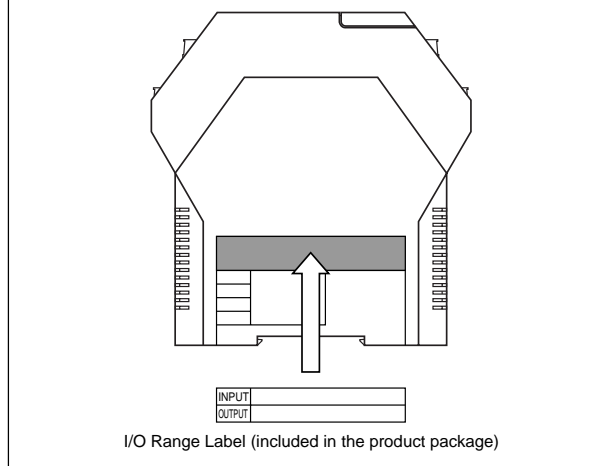

STATUS INDICATOR LED


Combinations of the three front LEDs (LD1, LD2, LD3) indicate the transmitter's operating status by different flashing patterns.

Examples are shown below.

- A Amber LED OFF
- G Green LED ON
- R Red LED Blink

NORMAL OPERATION (RUN) MODE			
LD1 G LD2 LD3 	PC Configuration RUN Mode (Option A) The transmitter is configured via PC and is in normal operating conditions.	LD1 G LD2 LD3 	DIP SW Configuration RUN Mode The transmitter is configured via DIP SW and is in normal operating conditions.
ERROR MODE			
LD1 A LD2 A LD3 A	System Error Indicates the CPU's communication error.	LD1 R LD2 R LD3 R	DIP SW Error DIP SW configuration is inappropriate. Check the DIP SW setting referring to Tables 2 – 11.
LD1 G LD2 A LD3 	Input Saturated in PC Configuration Mode (Option A) The input is saturated.	LD1 G LD2 A LD3 	Input Saturated in DIP SW Configuration Mode The input is saturated.
LD1 G LD2 LD3 A	Output Saturated in PC Configuration Mode (Option A) The output is saturated. (approximately below -15% or above +115%)	LD1 G LD2 LD3 A	Output Saturated in DIP SW Configuration Mode The output is saturated. (approximately below -15% or above +115%)

EXTERNAL DIMENSIONS mm (inch)

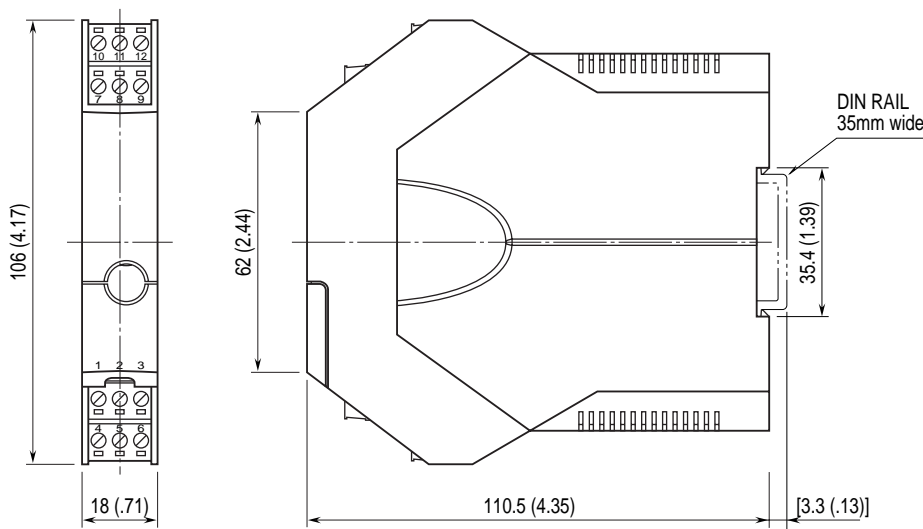

•When mounting, no extra space is needed between units.

M-SYSTEM WARRANTY

M-System warrants such new M-System product which it manufactures to be free from defects in materials and workmanship during the 36-month period following the date that such product was originally purchased if such product has been used under normal operating conditions and properly maintained, M-System's sole liability, and purchaser's exclusive remedies, under this warranty are, at M-System's option, the repair, replacement or refund of the purchase price of any M-System product which is defective under the terms of this warranty. To submit a claim under this warranty, the purchaser must return, at its expense, the defective M-System product to the below address together with a copy of its original sales invoice. THIS IS THE ONLY WARRANTY APPLICABLE TO M-SYSTEM PRODUCT AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. M-SYSTEM SHALL HAVE NO LIABILITY FOR CONSEQUENTIAL, INCIDENTAL OR SPECIAL DAMAGES OF ANY KIND WHATSOEVER.

M-System Co., Ltd., 5-2-55, Minamitsumori, Nishinari-ku, Osaka 557-0063 JAPAN, Phone: (06) 6659-8201, Fax: (06) 6659-8510, E-mail: info@m-system.co.jp